

### HIGH VACUUM RECTIFIER

**A237** 

June 1960 Page 1

Service Type CV482

### INTRODUCTION

The A237 is a high vacuum rectifier with maximum ratings (in air) of 65kV peak inverse voltage and 1.5A peak anode current. It is of compact construction and has been designed for very reliable operation at high voltage.

#### GENERAL DATA

(See also Preamble to Rectifier Section of this Catalogue)

Electrical									
Filament						Tho	oriated	l Tun	gsten
Filament Voltage							4.	0	v
Filament Current							12.	0	$\mathbf{A}$
Max Peak Inverse Vo	ltage					40	)	65	kV
Max Continuous Anode Dissipation:									
Natural Cooling						120	)	100	W
Forced-air Cooling	(See N	ote 1)				160	)	100	W
Max Anode Current:									
Peak							1.	5	Α
Mean (See Note 2)							250		mA
Nominal Impedance (	at 350n	nA)	• •	• •	• •	• •	1000		Ω
Mechanical									
Overall Length				9.85	inches	(250	mm)		Max
Overall Diameter				2.37	inches		mm)		Max
Net Weight				9			gm)		
Base		• •				Golia	th Ed	ison S	Screw
Mounting Position (S			on pag	ge 2)				Ve	rtical
Max Temperature of	bulb	• •	• •	• •			200		$^{\circ}\mathrm{C}$

#### NOTES

- 1. With forced-air cooling the continuous anode dissipation may be increased up to the absolute maximum of 160W provided that the peak inverse voltage does not exceed 40kV and also provided that the temperature of the glass envelope does not exceed 200°C at any point. Above 40kV the continuous anode dissipation must not exceed 100W under any conditions. The airflow—must be such that all-round cooling is achieved and no part of the glass envelope must attain a temperature greater than 200°C. Normally the hottest part is the area round the anode, but the anode seal may also require attention.
- 2. The mean value of the anode current is a function of the waveform. It should ← be determined for each particular application and must be such that the maximum anode dissipation is not exceeded.

← Indicates a change



# HIGH VACUUM RECTIFIER

**A237** 

Page 2

#### INSTALLATION

The valve should be operated in a vertical position, with the base screw at the bottom. The reversed position is permitted if overheating of the base can be avoided. The holder of the valve should be sprung to avoid the transmission of sharp shocks which might cause breakage of the thoriated tungsten filament.

In view of the low voltage high current filament supply it is essential that the valve is screwed tightly into the socket and that a very good contact is always maintained.

Sufficient clearance must be allowed to avoid sparking or corona at high voltages. It is also important that the air round the valve is not confined, but allowed to circulate freely to dissipate the heat generated. When working at or near the maximum rating for natural cooling it is advisable to provide channels in order to increase the convection by chimney effect.

#### X-RAY WARNING


X-rays are produced when the A237 is operated with a peak inverse anode voltage above 16kV (absolute value). These rays can constitute a health hazard unless the valve is adequately shielded for X-ray radiation. This is entirely a function of high voltage devices and does not reflect upon the design of the valve.



### HIGH VACUUM **RECTIFIER**

June 1960



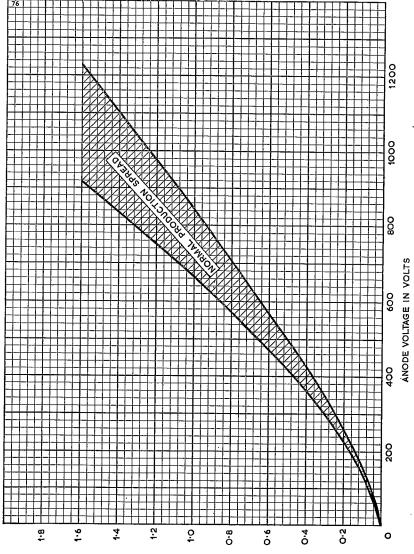

ANODE CURRENT IN AMPERES




# HIGH VACUUM RECTIFIER

A237

Page 4

#### OUTLINE

563

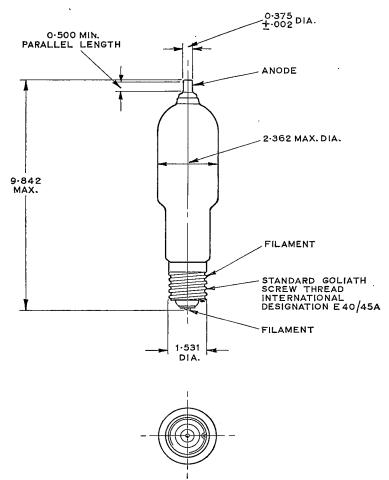

ALL DIMENSIONS IN INCHES